


## General Specifications

| Specification                          | acA1300-60gc  |
|--|---|
| Resolution<br>(H x V Pixels)           | 1280 x 1024   |
| Sensor Type                            | e2v EV76C560 ACT<br>Progressive scan CMOS<br>Global shutter<br>Rolling shutter<br>The <a href="#">shutter mode</a> can be set via software.   |
| Optical Size                           | 1/1.8"  |
| Effective Sensor<br>Diagonal           | 8.7 mm  |
| Pixel Size (H x V)                     | 5.3 $\mu\text{m}$ x 5.3 $\mu\text{m}$   |
| Frame Rate<br>(at Default<br>Settings) | 60 fps  |
| Product Line                           | <a href="#">ace classic</a>   |
| Mono / Color                           | Color   |
| Image Data<br>Interface                | Fast Ethernet (100 Mbit/s)<br>Gigabit Ethernet (1000 Mbit/s)  |
| Pixel Formats                          | See <a href="#">Pixel Format</a> .  |
| Synchronization                        | Via hardware trigger<br>Via software trigger<br>Via free run  |
| Exposure Time<br>Control               | Programmable via the camera API   |
| Camera Power<br>Requirements           | Power over Ethernet (PoE) 802.3af compliant supplied via<br>Ethernet connector<br>12 VDC supplied via I/O connector<br><br>$\approx 2.6$ W when using Power over Ethernet<br>$\approx 2.0$ W @ 12 VDC when supplied via I/O connector |

|                  |  |
|------------------|--|
| I/O Lines        | 1 <a href="#">opto-coupled input line</a><br>1 <a href="#">opto-coupled output line</a>  |
| Lens Mount       | C-mount, CS-mount  |
| Size (L x W x H) | 42.0 mm x 29 mm x 29 mm (without lens mount or connectors)<br>60.3 mm x 29 mm x 29 mm (with lens mount and connectors)   |
| Weight           | <90 g  |
| Conformity       | CE (includes RoHS), UL Listed, FCC, GenICam, GigE Vision, IP30, IEEE 802.3af (PoE), REACH<br>The EU Declaration of Conformity is available on the <a href="#">Basler website</a> |
| Software         | <a href="#">Basler pylon Camera Software Suite</a> (version 4.0 or higher)<br>Available for Windows, Linux x86, Linux ARM, and OS X  |
| Accessories      | <a href="#">Cables for your camera model</a><br><a href="#">Lenses for your camera model</a><br><a href="#">Additional accessories for your camera model</a>                     |

## Spectral Response

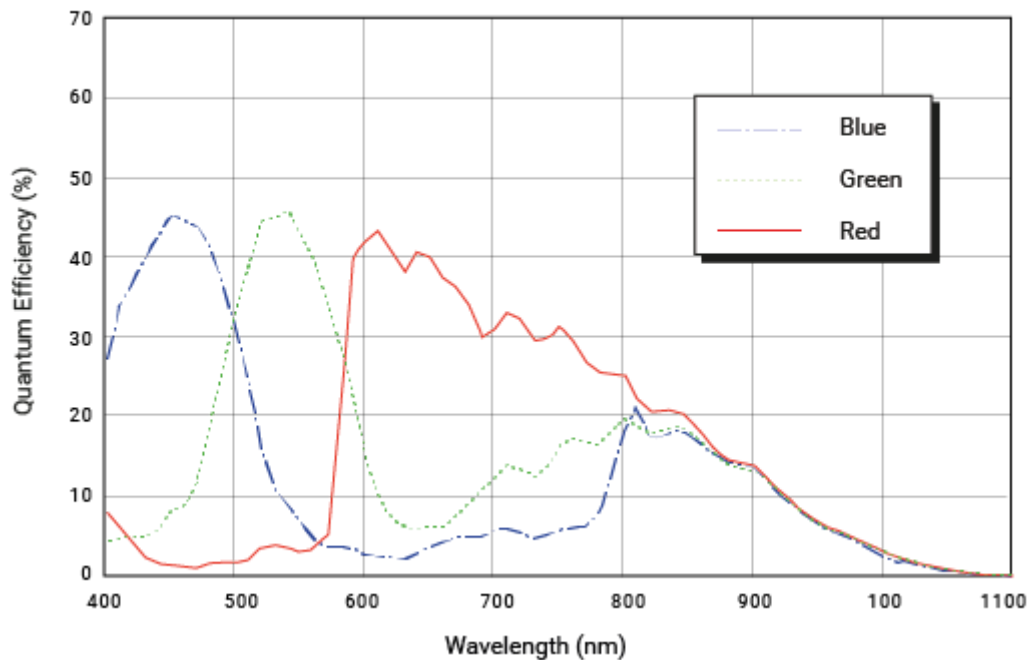

The spectral response curve excludes lens characteristics, light source characteristics, and IR cut filter characteristics.

## IR Cut Filter

Color cameras are equipped with an IR cut filter. The filter is mounted in a filter holder inside the lens mount.

The IR cut filter has the following spectral characteristics:


| Wavelength [nm] | Transmittance            |
|-----------------|--------------------------|
| 450–610         | $T_{\min} > 90 \%$       |
| 450–620         | $T_{\text{avg}} > 93 \%$ |
| $645 \pm 10$    | $T = 50 \%$              |
| 700–1070        | $T_{\max} < 4 \%$        |
| 690–1070        | $T_{\text{avg}} < 1 \%$  |

The filter holder can be removed. For more information, see the [ace IR Cut Filter Holder Removal Procedure](#) application note.


## Mechanical Specifications

### Camera Dimensions and Mounting Points

#### C-Mount Camera Models

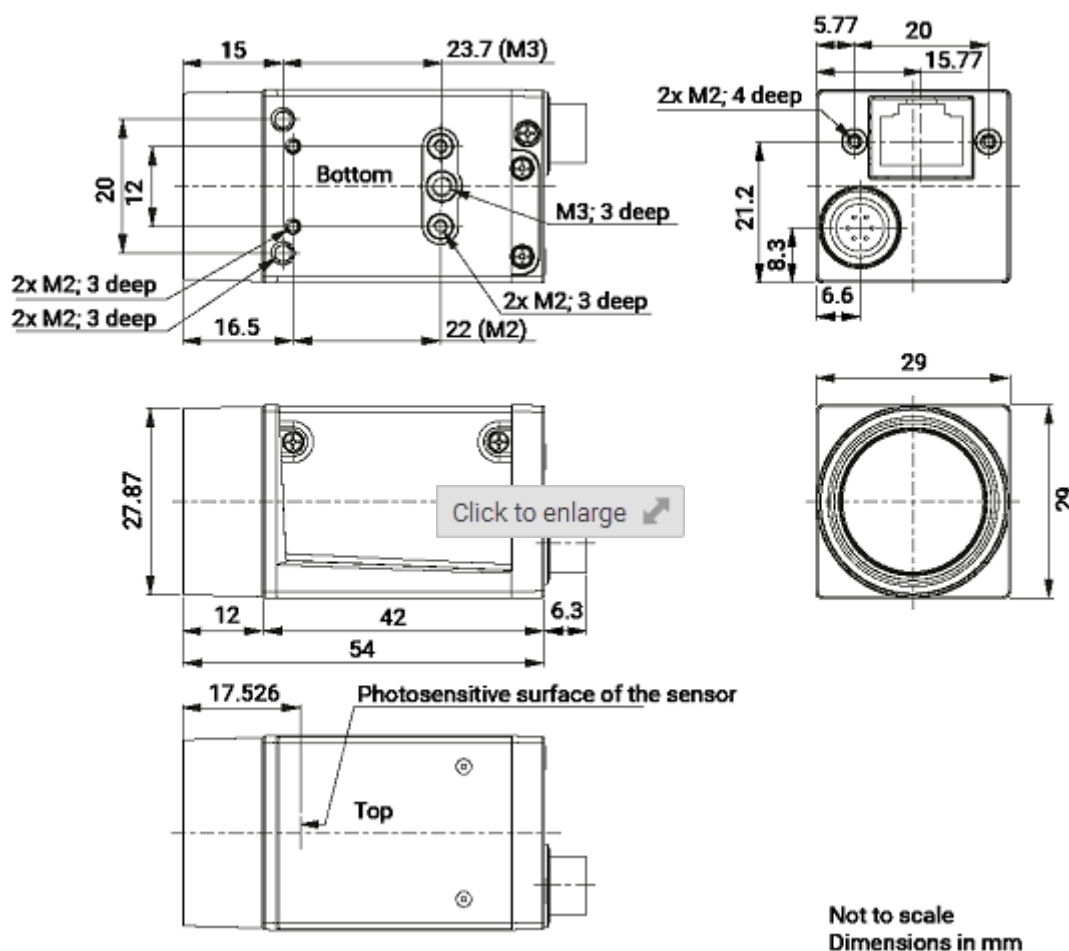

#### CS-Mount Camera Models

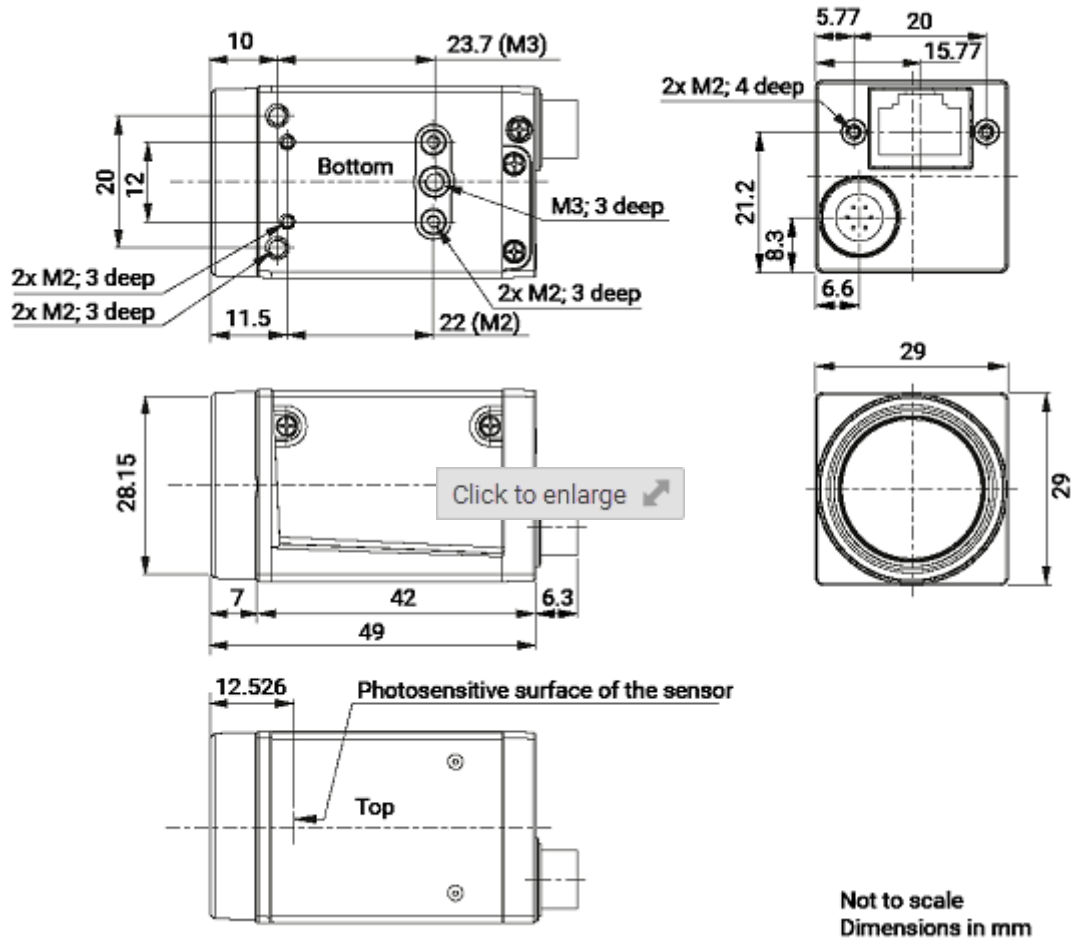

## Maximum Allowed Lens Intrusion

→ See [Maximum Allowed Lens Intrusion](#).

## Stress Test Results

→ See [Stress Test Results](#).

## Requirements

### Environmental Requirements

#### Temperature and Humidity

|   |                                   |
|---|-----------------------------------|
| Housing temperature during operation        | 0–50 °C (32–122 °F)               |
| Humidity during operation                   | 20–80 %, relative, non-condensing |
| Storage temperature                         | -20–80 °C (-4–176 °F)             |
| Storage humidity                            | 20–80 %, relative, non-condensing |
| Housing temperature according to UL 60950-1 | max. 70 °C (158 °F)               |
| Ambient temperature according to UL 60950-1 | max. 30 °C (86 °F)                |

UL 60950-1 test conditions: no lens attached to camera; no heat dissipation measures; ambient temperature kept at 30 °C (86 °F).

## Heat Dissipation

→ See [Providing Heat Dissipation](#).

## Electrical Requirements

### DANGER

Electric Shock Hazard



### WARNING

Fire Hazard



### NOTICE

Incorrect voltage can damage the camera.



## Camera Power

### NOTICE

Dual camera power supply can damage the camera.



- **Power supply via Power over Ethernet (PoE):** Power must comply with the IEEE 802.3af specification.
- **Power supply via I/O connector:** The nominal operating voltage is 12 VDC (10.8 VDC minimum, 13.2 VDC maximum), includes <1 % ripple.

## Opto-Coupled I/O Input Line

| Voltage      | Description   |
|--------------|---|
| 30 VDC       | Absolute maximum. This voltage must never be exceeded. Doing so may damage the camera and voids the warranty. |
| 0–24 VDC     | Safe operating range.   |
| 0–1.4 VDC    | Indicates a logical 0 (with inverter disabled).   |
| >1.4–2.2 VDC | Region where the logic level transition occurs; the logical state is not defined in this region.              |
| >2.2 VDC     | Indicates a logical 1 (with inverter disabled).   |

- **Minimum current:** 5 mA
- **Current draw:** 5–15 mA
- If the camera is connected to a PLC device, Basler recommends using a cable that adjusts the voltage level of the PLC to that of the camera.

## Opto-Coupled I/O Output Line

| Voltage    | Description   |
|------------|---|
| 30 VDC     | Absolute maximum. This voltage must never be exceeded. Doing so may damage the camera and voids the warranty. |
| 3.3–24 VDC | Safe operating range.   |
| <3.3 VDC   | Unreliable I/O output.  |

- **Leakage current:** <60  $\mu$ A. Actual leakage depends on operating temperature and production spread of electronic components.
- **Maximum load current:** 50 mA
- **Minimum load current:** Not specified. However, consider the following:
  - Leakage current will have a stronger effect when load currents are low.
  - Propagation delay of the output increases as load currents decrease.
  - Higher-impedance circuits tend to be more susceptible to EMI.
  - Higher currents cause higher voltage drops in long cables.

## Circuit Diagrams

→ See [Circuit Diagrams for Basler ace Cameras](#).

## Cable Requirements

### Ethernet Cable

- Use a high-quality Ethernet cable. Use of shielded CAT 5E or better cables with S/STP shielding is recommended.
- Use either a straight-through (patch) or a cross-over Ethernet cable.
- As a general rule, applications with longer cables or applications in harsh EMI conditions require higher category cables.
- Close proximity to strong magnetic fields should be avoided.
- Basler recommends using Ethernet cables from the [Basler Vision Components](#) range.


### I/O Cable

- The I/O cable must be shielded.

- The I/O cable must have a cross-section of at least 0.14 mm<sup>2</sup> (close to AWG26).
- Use a twisted pair wire cable.
- Maximum recommended cable length: 10 m
- Camera-side connector: Hirose micro plug (part number HR10A-7P-6S) or equivalent
- Close proximity to strong magnetic fields should be avoided.
- If you are supplying power to the camera via Power over Ethernet, the I/O cable will not be used to supply power. However, you can still use the cable to connect to the I/O lines.
- Basler recommends using I/O cables from the [Basler Vision Components](#) range:
  - [Opto-I/O cable, 10 m](#) (blue cable): For use with the [opto-coupled I/O lines](#) of your camera. Does not provide camera power. Therefore, when using this cable, you must provide power via Power over Ethernet (PoE).
  - [Power-I/O cable, 10 m](#) (gray cable): For use with the [opto-coupled I/O lines](#) of your camera. Unlike the opto-I/O cable (blue cable, see above), this cable provides camera power.
  - [Opto-GPIO Y-cable, 2 x 10 m](#) (yellow-blue cable): Offers two separate wires. One can be used to connect the [opto-coupled I/O lines](#) of your camera. The other one can be used to provide camera power.
  - [Power-I/O PLC+ cable, 10 m](#) (gray cable): For use with the [opto-coupled I/O lines](#) of Basler cameras connected to a programmable logic controller ([PLC](#)). It adapts the signal level for zero voltage from PLC level (<8.4 VDC) to TTL level (<1.4 VDC).

## Physical Interface


### Camera Connectors

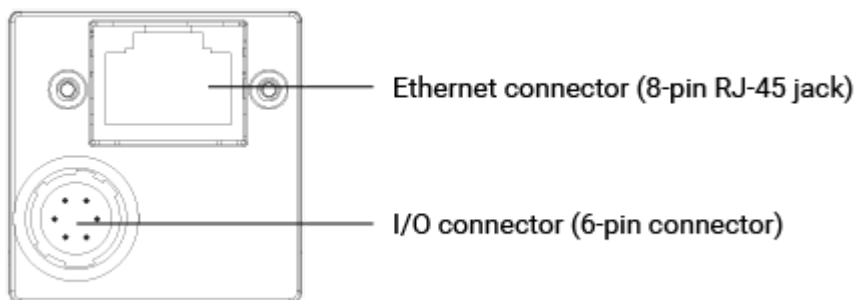

| Connector          | Description  |
|--------------------|--|
| Ethernet connector | <ul style="list-style-type: none"> <li>• 100/1000 Mbit/s Ethernet connection to the camera</li> <li>• If power is not supplied via I/O connector: Power over Ethernet (PoE)</li> <li>• 8-pin RJ-45 jack<br/>Recommended mating connector: 8-pin RJ-45 plug (snap-in or with locking screws).</li> <li>• When using locking screws, note the horizontal orientation of the screws.</li> </ul> |

|               |  |
|---------------|--|
| I/O Connector | <ul style="list-style-type: none"> <li>If power is not supplied via Power over Ethernet (PoE): Power supply</li> <li>Hirose micro receptacle (part number HR10A-7R-6PB)<br/>Recommended mating connector: Hirose micro plug (part number HR10A-7P-6S)</li> </ul> |
|---------------|--|

## Connector Pin Numbering and Assignments

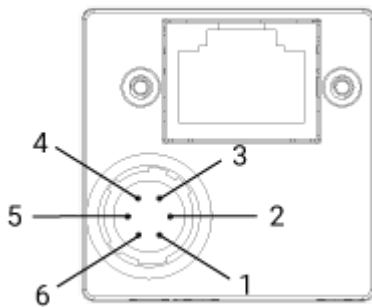

| Pin | Line   | Function                          |
|-----|--------|-----------------------------------|
| 1   | -      | 12 VDC camera power               |
| 2   | Line 1 | Opto-coupled I/O input line       |
| 3   | -      | Not connected                     |
| 4   | Out 1  | Opto-coupled I/O output line      |
| 5   | -      | Ground for opto-coupled I/O lines |
| 6   | -      | Ground for camera power           |

## Precautions

→ See [Safety Instructions for Basler ace Cameras](#).

## Installation

→ See [Camera Installation](#).

## Features

→ See the [camera features section](#).

Suggestions for improving the documentation? Send us your [feedback on this topic](#).

For technical questions, please contact your [local distributor](#) or use the [support form](#) on the Basler website.